

HOW TO SOLVE STARTING PROBLEMS?



1. Check the pulley: When you rotate the pulley, there should be some resistance. If you cannot feel any resistance and the pulley rotates too easily, then the screw is broken and needs to be replaced. If necessary, please contact us again to arrange delivery.



2. Check the starter: Pull the starter handle a few times. If you do not feel any resistance, it means the spring of the starter is broken and needs to be replaced. If necessary, please contact us again to arrange delivery.



3. Check the spark plug: The spark plug may be loose. If so please screw it tightly or else the product will not start.